

Tcop Commands Pocket Reference Guide – BASIC, SILVER & GOLD

Below are the commands that can be sent from owner's mobile phone to Tcop to configure its features to meet owner's needs. In addition, note:

- Tcop commands are 'NOT' case-sensitive
- Ensure 'NOT' to give any space in between commands
- Ownership registration
TCOP,OR,<OWNER NAME>,<VEHICLE NO>,<PLAN NAME>¹
(Example: TCOP,Rahul,KA-04-Z-7568,Basic)
- Change owner details (Owner name and/or Vehicle number)
TCOP,OD,<OWNER NAME>,<VEHICLE NO>
(Example: For owner name update: TCOP,Vijay,KA-04-Z-7568)
(Eg. For vehicle number update: TCOP,OD,Rahul,KA-04-Z-7564)
- Change frequency of receiving messages when Tcop is in "Active" mode ²
TCOP,MD,<DURATION IN MULTIPLES OF 5>
(Example: To set frequency to 30 mins: TCOP,MD,30)
- Addition of mobile numbers from which you can get current location information
TCOP,SR,<Mobile Number1>,<Mobile Number2>,<Mobile Number3>
(Example: TCOP,SR, 9986256912,97413555744,9886098880)

(Page 2 inner)

- Remove mobile numbers from which you can get current location information
TCOP,SU,<Mobile Number>
(Example: TCOP,SU,9886098880)
- Add owner's alternate mobile number (In case of change in owner's default mobile number - due to loss of mobile phone or switchover to different service provider)
TCOP,AO,<Mobile Number>
(Example: TCOP,AO,9845012345)
- Change owner's default mobile number to alternate mobile number
TCOP,AC
- Change display of vehicle number & date details in SMS
TCOP,DC,V,START
TCOP,DC,V,STOP
TCOP,DC,D,START
TCOP,DC,D,STOP
- Find current location of your vehicle
TCOP,LF
- Change mode from ACTIVE to PASSIVE and vice-versa ²
TCOP,MC,ACTIVE
TCOP,MC,PASSIVE

(Page 3 inner)

- To Enable/Disable SMS alert to owner's mobile post intrusion detection
TCOP,SM,ENABLE
TCOP,SM,DISABLE
- To Enable/Disable Siren alert post intrusion detection
TCOP,SI,ENABLE
TCOP,SI,DISABLE
- To Enable/Disable voice call alert to owner's mobile post intrusion detection
TCOP,CA,ENABLE
TCOP,CA,DISABLE

(Page 4 – outer)

¹ Tariff plan currently extended to Tcop comes under "Basic" plan

² Tcop device is pre-configured to "Passive" mode. Post intrusion detection Tcop automatically switches to "Active" mode. You need to send a SMS from your Mobile phone to switch Tcop back to "Passive" mode.

Additional Commands – BASIC, SILVER & GOLD

- TS – Time Set - To re-set device date & time to current date/time
TCOP,TS
- HO/HF–To locate your car in a parking lot or to scare the thief/person abusing your car under post-theft circumstances
TCOP,HO/HF (To switch on or off the Siren)
- EI–Enable Intrusion Alerts (SMS, SIREN) - TCOP,EI
- DI–Disable Intrusion Alerts (SMS,SIREN) - TCOP,DI
- ID–Intrusion Detection Duration. TCOP,ID,5 makes sensor start detection after 5 mins. Default time is set to 2 minutes
TCOP,ID,Mins
- IO–To forcefully enable Intrusion, if is disabled for some reason
TCOP.IO

(Page 5 – outer)

- DA–To enable/disable alert in case Door is opened at odd hours
TCOP,DA,ENABLE
TCOP,DA,DISABLE
- DT–Door open–Start & End Time. Default start time is 10 p.m. & end time is 6 a.m.
(Ex:TCOP,IT,23,07 –Start at 11p.m & end at 7 a.m.)
TCOP,DT,StartHour,EndHour
- IA–To enable/disable alert in case Ignition is switched on at odd hours
TCOP,IA,ENABLE
TCOP,IA,DISABLE
- IT–Ignition Time–Start & End Time. Default start time is 10 p.m. & end time is 6 a.m.
(Ex:TCOP,IT,23,07 –Start at 11p.m & end at 7 a.m.)
TCOP,IT,StartHour,EndHour

(Page 6 – outer)

ADDITIONAL COMMANDS (FOR SILVER & GOLD MODELS ONLY)

- LS–Search business names based on area where your car is at present
Eg: TCOP,LS,ICICI